# Quick operation manual

### Quick operation manual of DIN meter installation

Thank you for your choose product of zhejiang CHINT instrument co., LTD., in order to facilitate your safe and correct use of the instrument, please read this manual carefully and be sure to pay attention to when using the following:

- The instrument must be conducted by professional installation and maintenance;
- Before the operation of the instrument wiring must be cut off the input signal;
- Always use the appropriate voltage detection device is used to determine each part instrument no voltage;

The following conditions will lead to abnormal device damage or device work:

- Instrument variable than setting is not correct;
- Voltage, current, frequency, beyond;
- Current or voltage polarity is not correct;
- Connection terminals not according to requirements;

# - Technical parameters

Table 1

Technical parameters		Index				
	Voltage	Connection mode	One-phase			
		Rated value (Un)	One-phase		AC230V	
		Working voltage	0.9Un—1.1Un			
		Limiting operating	0.8 Un—1.15Un		1 15Un	
		voltage				
		Consumption	≤10VA/ 2W			
<b>T</b>		Resistance	>500kΩ			
Input	Current	Rated value	Direct access		AC 5(60)A	
signal		Rated value	Mutual inductance a	iccess	AC */100mA	
		C 4 1 1	Direct access to the instrument: instant: 30Imax,			
		Current overload	Rated frequency half cycle time;			
		Consumption of	≤2VA			
		the current circuit				
		Resistance	$<$ 20m $\Omega$			
	Frequency	Input range	45Hz∼65Hz			
		Display	В	ock code	code LCD display	
		Active energy	Class 1S resolving power 0.01kWh		olving power 0.01kWh	
		Pulse constant	Direct access to the instrument Active 800 imp/k		Active 800 imp/kWh,	
Output		Pulse signal output	Supply active energy optical signal and optocoupler collector open-circuit electrical signal impulse output, pulse length:80±16ms.			
	Auxiliary function	Protocol	Supported MODBUS RTU or DL/T645-2007 communication protocol (switch), communication baud rate 2400 BPS, 4800 BPS, 9600 BPS can be set, the default 2400 BPS.			

# **CHNT**

# Quick operation manual

Note 1: mark does project is optional, as shown in the table 4.

Note 2: the other performance index, indoor table reference IEC 62053 - 21 requirements.

Note 3: instrument applies only to its corresponding technical performance and technical parameters.

# 二、Wiring instructions::

 


Figure 1 Direct access to the instrument

#### Voltage signal wire

3------Un(Voltage input zero) 4------Un(Voltage input zero)

### **Current signal wire**

1 -----I\*( Current input) 2 -----I (Current output)

#### **RS485** communication line

7------ (RS485 A end) 8------ (RS485 B end)

#### **Energy pulse output line**

5--- output high end of active energy pulse 6----- output low end of active energy pulse

 


Figure 2 Mutual inductance access to the instrument

## Voltage signal wire

1 ------ UL (Current input) 2 ------ UL (Current outpu) 3------UN(Voltage input zero) 4------UN(Voltage input zero)

Current signal wire

5 -----I\*( Current input) 6 -----I (Current output)

**RS485** communication line

7------B (RS485 B end) 8------B (RS485 B end)

#### 三、Installation size

Table 2

Model	Shell size	Guide rail mounting	
Model	(width N×length M×depth D)	dimensions	
DDSU666	36mmx89mmx74mm	35mm	

#### 四、 Communication protocol

Communication protocol accord with DLT (645-645 multi-function watt-hour meter communication protocol, support the communication address, id code, speaking, reading and writing (current) positive active power, voltage data blocks, instantaneous active power current data block, block, power grid frequency, power factor data block. Support AAAAAAAAAAAAAAAA radio and read data and table number.

DL/T 645-2007 protocol switching to the ModBus RTU communication protocol data frame is as follows:

FE FE FE 68 xx xx xx xx xx xx xx 68 14 0E 33 33 35 3D 35 33 33 33 33 33 33 33 33 33 6S 16

Note: xx xx xx xx xx xx for the table address; CS to check code.

Communication parameters description: this instrument provides A standard RS485 communication interface and ModBus RTU communication protocol (see appendix A), communication can read or modify



# Quick operation manual

the parameters of the information, as shown in table 3.

Table 3 Communication parameter information

Parameter address	Parameter code	Instruction of the parameters	Type of data	Length of data Word	Read&write attributes
0000Н	UCode	Code Programming password codE 16-bit with symbols		1	R/W
0001H	REV.	Reserved, actual read is the version number	16-bit with symbols	1	R
0002Н	ClrE Electric energy zero clearing CLr.E(1:zero clearing)		16-bit with symbols	1	R/W
0003Н	RESERVED RESERVED 16-bit with symbols		1		
0004H	RESERVED	RESERVED RESERVED 16-bit with symbols		1	
0005H	ChangeProtocol Protocol changing-over 16-bit with symbols			1	R/W
0006Н	Addr Communication address Addr 16-bit with symbols		1	R/W	
0007Н	RESERVED	RESERVED	16-bit with symbols	1	
0008Н	RESERVED	RESERVED	16-bit with symbols	1	
0009Н	RESERVED	RESERVED	16-bit with symbols	1	
000AH	RESERVED	RESERVED	16-bit with symbols	1	
000BH	Meter type	Meter type	16-bit with symbols	1	R
000CH	BAud	Communication baud rate bAud	16-bit with symbols	1	R/W
000DH	RESERVED	RESERVED	16-bit with symbols	1	
000EH	RESERVED	RESERVED	16-bit with symbols	1	
000FH	RESERVED	RESERVED	16-bit with symbols	1	
0010H	RESERVED	RESERVED	16-bit with symbols	1	
		Electric quantity of the seconda			
2000Н	U	Voltage	single precision floating decimal	2	R
2002Н	I	Current	single precision floating decimal	2	R
2004H	P	Conjunction active power, the unit is KW	single precision floating decimal	2	R
2006Н	Q	Conjunction reactive power, the	single precision	2	R

**CHNT** 

Quick operation manual

		unit is Kvar	floating decimal			
2008H	RESERVED	RESERVED single precision floating decimal		2	R	
200AH	PF	Conjunction power factor	single precision floating decimal	2	R	
200CH	RESERVED	RESERVED	single precision floating decimal	2	R	
200EH	Freq	Frequency	single precision floating decimal	2	R	
2010H	RESERVED	RESERVED single precision floating decim		2	R	
Electrical data of the secondary side						
4000H	Ер	Active in electricity	single precision floating decimal	2	R	
400AH	-Ep	Reverse in electricity	single precision floating decimal	2	R	

ChangeProtocol such as protocol switching, data for 2 for Modbus RTU protocol -, data to 1 for DL/T 645-2007;

The CLr. E power reset write 1 removal of total power;

BAud rate:

1:2400bps; 2:4800bps; 3:9600bps;